


# CHAPTER 5 MAINTENANCE AND INSPECTION

## DANGER

The main power must always be turned off before attempting to assemble, inspect, adjust or service this machine. Otherwise, contact with the voltage supplied or the operation of switches by mistake may result in death.


### 5.1 Disassembly of milling chamber

1. Make hopper empty as clean as possible, if any rice remains at the hopper.
2. Take 4 pieces of flat head screw out.
3. Lift the hopper up and take it out. Now you can see and disassemble the milling chamber.

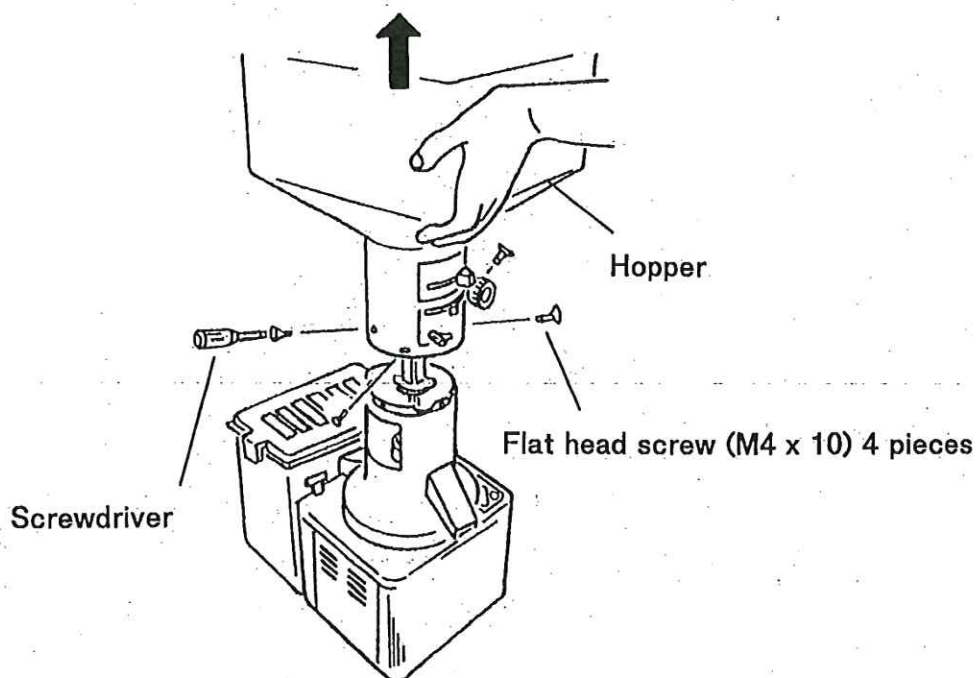

## 5.2 Change of Screen

Take out 4 pieces of screw to fix the screen.

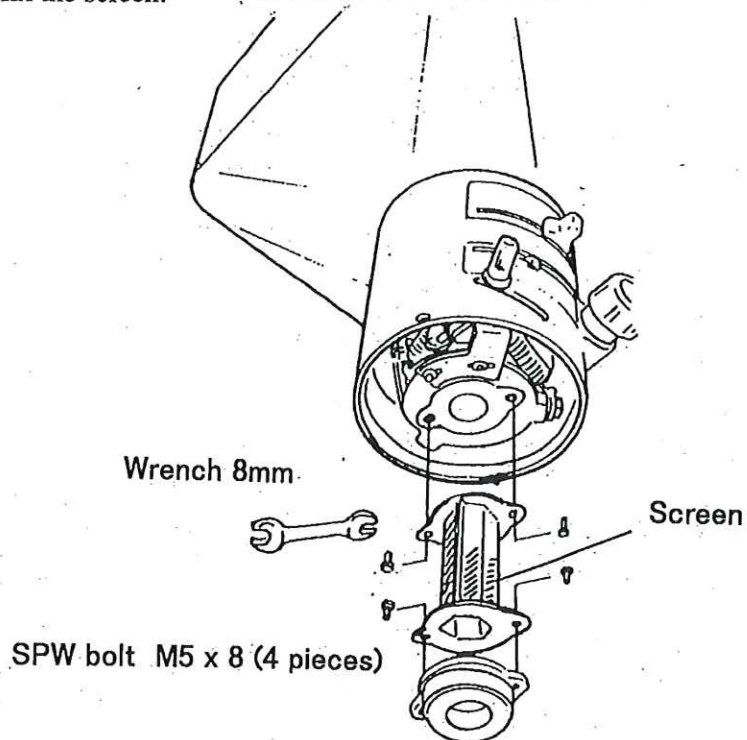

## 5.3 Change of Milling Roll

Unfasten 2 pieces of bolt (M6 x 15) by hexagonal bar wrench, after removed rubber seal.

