


How to Maintenance & Check

1 Cleaning of Equal Division Hopper

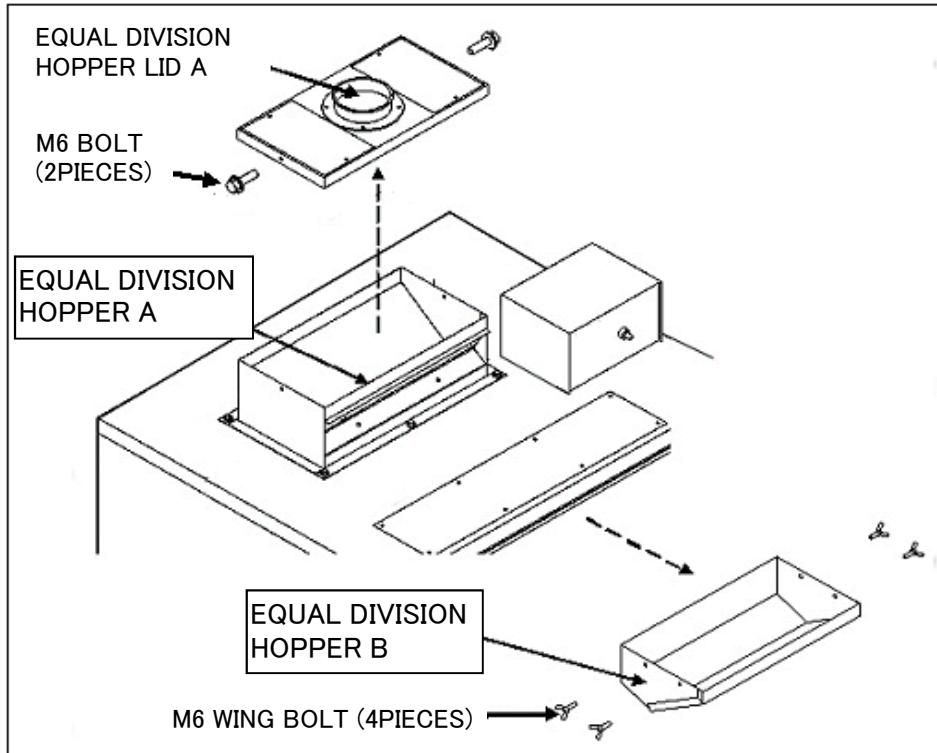

NOTE

- Do not use the brush and spatula made from metal for cleaning.
- If parts have scuff, it may easy to have brown rice grime and bran.


1

Unfix the M6 Bolt(2pieces), remove the Equal Division Hopper Lid A, clean the inside of it..

2

Unfix the M8 Wing Nut(4pieces), take out the Equal Division Hopper B, then clean it.

2 Check and Cleaning of Stone discharge outlet, Screen and Chute

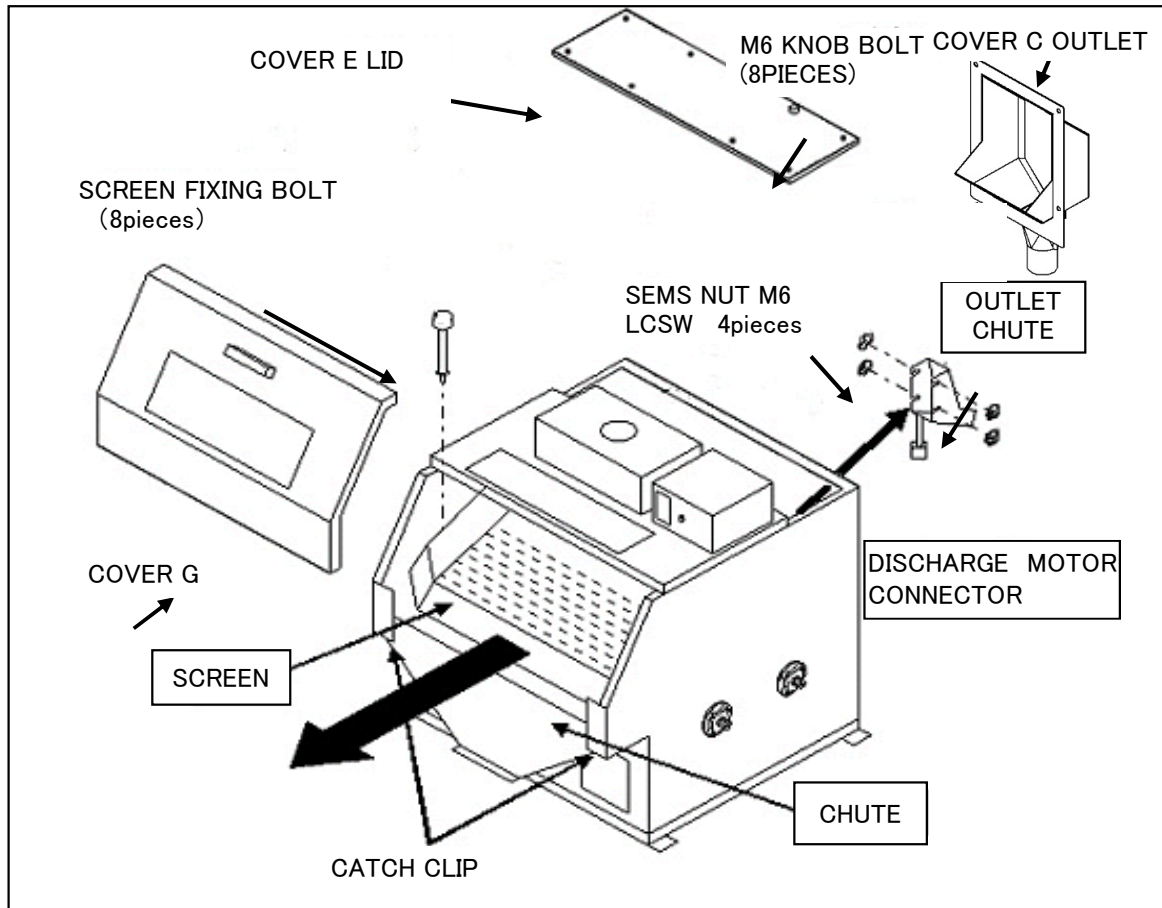

1 Unfix the Knob Bolt(8pieces), remove the Cover E Lid Big.

2 Unfix the M6 Bolt (4pieces), remove the Cover C Outlet.

NOTE

● Do not use the brush and spatula made from metal for cleaning.

If parts have scuff, it may easy to have brown rice grime and bran.

3

Remove the Discharge Motor Connector, unfix the M6 Nut(4pieces), then remove the Outlet Chute.

Check the spring whether it has crack or trip. Then clean it.

4


Unfix the CATCH CLIP(2pieces), remove the COVER G.

5

Unfix the SCREEN FIXING BOLT(8pieces), draw the SCREEN, then clean it. If necessary, replace the new one.

6


Clean the CHUTE.

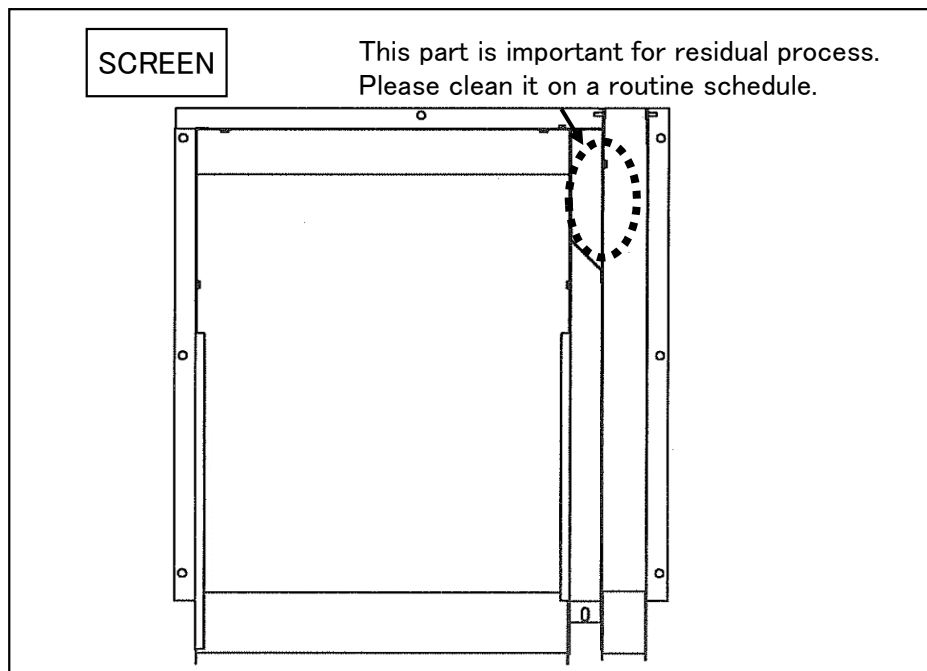

NOTE


● When you assemble, please fix the Bolt and Nut surely.

3 Damage of V Belt and Tension Pulley

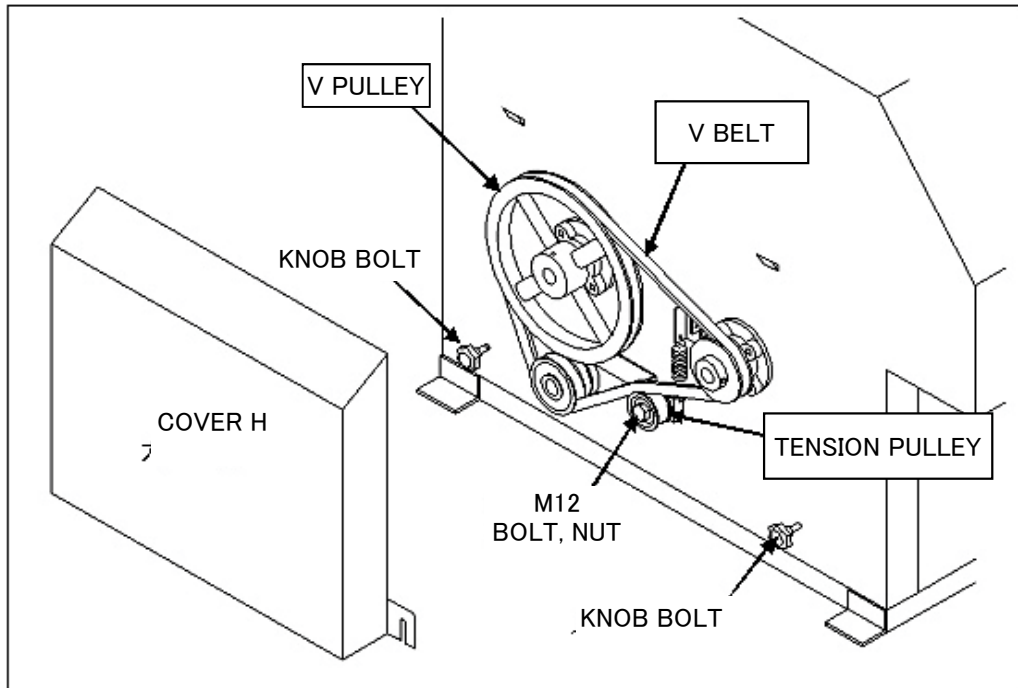

- 1** Unfix the Knob Bolt, remove the Cover H, then check the damage of V Belt and Tension Pulley
- 2** When you replace the V Belt, displace the V Belt from Tension Pulley at the same time rotating the V Pulley by hand, then remove the V Belt.
- 3** After unfixing the M12 Bolt and Nut, replace the Tension Pulley.

4 Cleaning of Fan Case

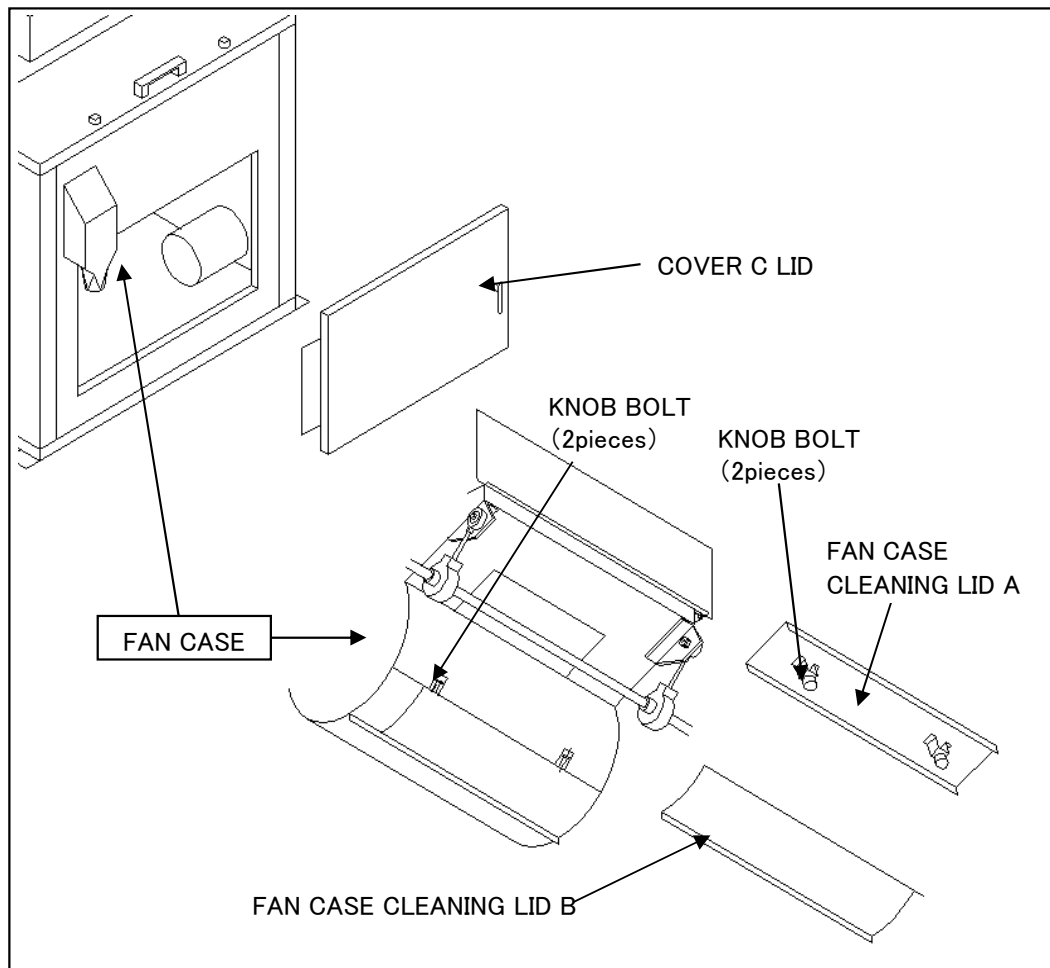

1 Remove the Cover C Lid.

2 Unfix the Knob Bolt (2pieces), remove the Fan Case Cleaning Lid A.
● After removing it, dust and broken rice fall down.

3 Unfix the Knob Bolt (2pieces), remove the Fan Case Cleaning Lid B.
● After removing it, dust and broken rice fall down.